

FILTERTECH *Industrial Liquid Filtration Systems*

Main Office / Factory:

113 Fairgrounds Drive
P. O. Box 527
Manlius, NY 13104-0527
Tel: (315) 682-8815
Fax: (315) 682-8825

Web: www.filtertech.com

West Region Office:

8400 South Kyrene Road
Suite 227
Tempe, AZ 85284
Tel: (480) 775-1111
Fax: (480) 775-0604

Subject: Your waste water sample submitted 66% acid rinse + 33% caster water mixture

The sample of unfiltered waste mixture was received and tested to show the effect of dry chemistry addition as it relates to the separation of solids from unfiltered water sample.


Centrifuged Sample: 1.5% solids by volume

The beginning parameters are as follows using a 200 ML sample.

Material As Received:

Temperature	60 °F
Turbidity	803 NTU
pH	7.5
Color	Cloudy brown/green

Unfiltered Mixture As Received

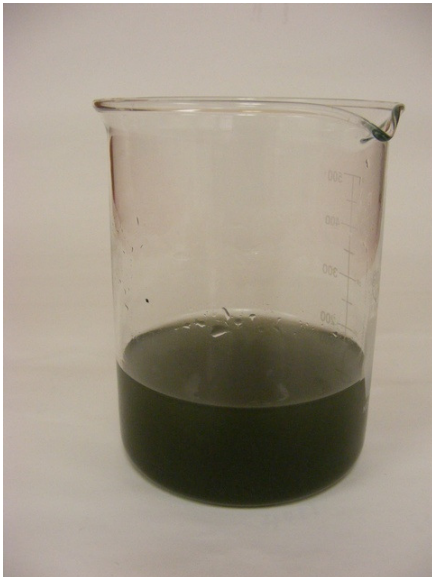


Using the 200 ML sample, while thoroughly mixing, temperature was raised to 100°F. Added 1.6 grams dry separation chemistry and allow mixing approximately 10 minutes at high speed to hydrate dry chemistry.

Separated Sample After Treatment



The sample was then processed through filter media one pass and final clean sample collected.


Filtered Water

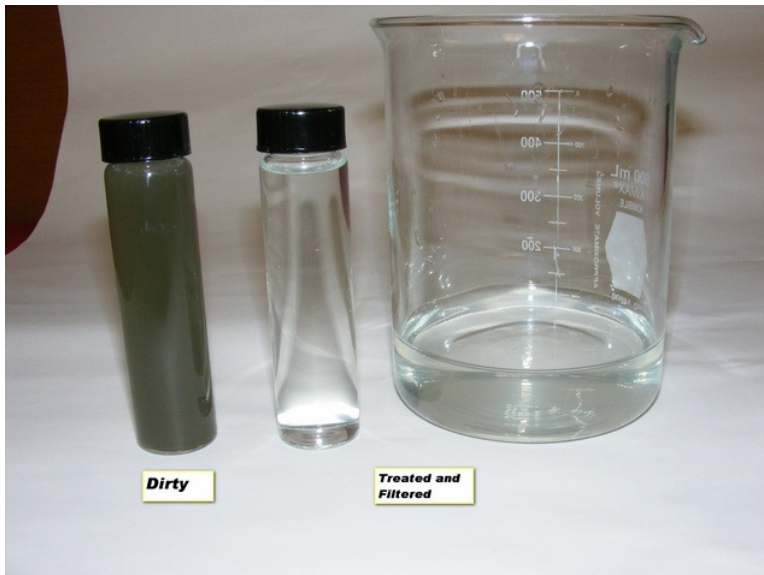

Final readings of the clean water are as follows:

Temperature 100°F
Turbidity 10 NTU
pH 9.8
Color Clear and colorless

Unfiltered Mixture; Clear filtered Mixture; Collected solids

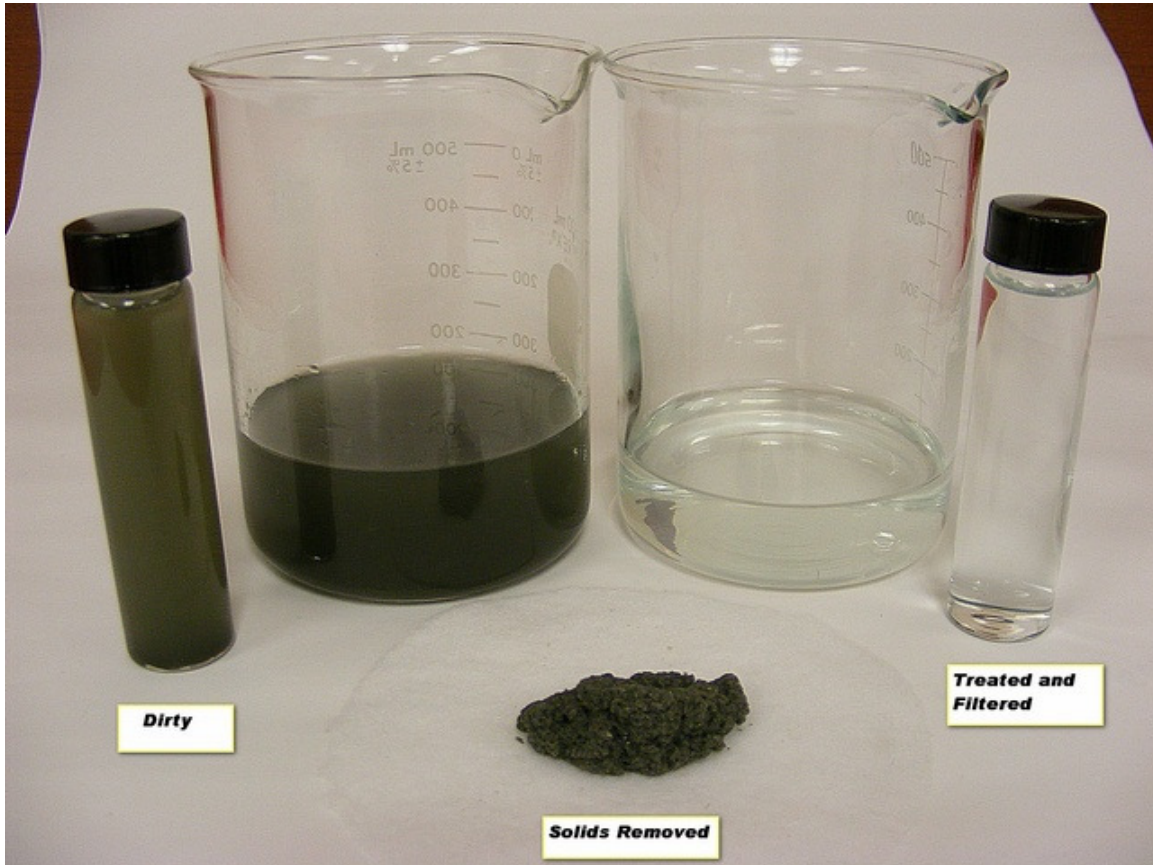

Parameter (in ppm or mg/L)	Untreated	After Treatment
Appearance	Cloudy, green	Clear, colorless
Suspended Solids	294	77
pH	8.73	7.67
Cadmium	<0.005	<0.005
Chromium (total)	0.09	<0.005
Copper	114	4.10
Nickel	0.05	<0.005
Lead	<0.02	<0.02
Zinc	0.31	<0.005

Summary

The sample showed typical reaction to dry chemistry formulation in both time and separation completeness. No adjustment of the formulation is recommended. The solids stayed permeable during filtration.

Sincerely,
FILTERTECH, INC.

A handwritten signature in black ink that reads "Joe Scalise". The signature is written in a cursive style with a large initial "J" and a distinct "S".

Joe Scalise

E-mail: jscalise@fildertech.com